


## FLORENCE COLLECTION

### TOWEL BARS


322109

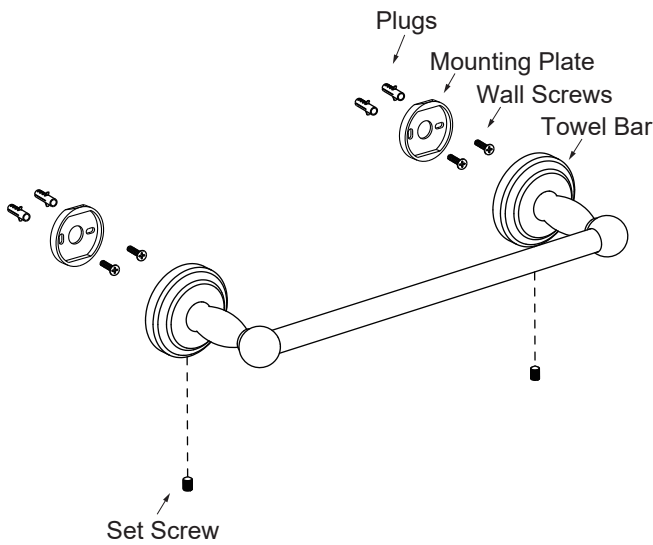

#### Tools required for installation




Level



Drill



Pencil

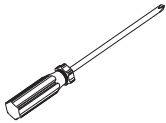

Screwdriver



Hammer

